



moser
ENGINEERING

Visit our online store @ www.moserengineering.com

102 Performance Dr. Portland, IN. 47371

Ph. 260.726.6689 / Fax. 260.726.4159

Templates for G-Body/Metric 10 Bolt Rears

On later model 10 Bolt GM rears from G-Body and Metric cars, there are only two brake backing plate mounting holes on the housing end as shown below in Figure D. The end will need to be modified in addition to the instructions on the previous page. The two bottom holes will need to be enlarged and the two top holes will need drilled to fit the 3/8" bolts supplied. Cut and remove Figure C to use as a template for drilling the holes in your stock housing end.


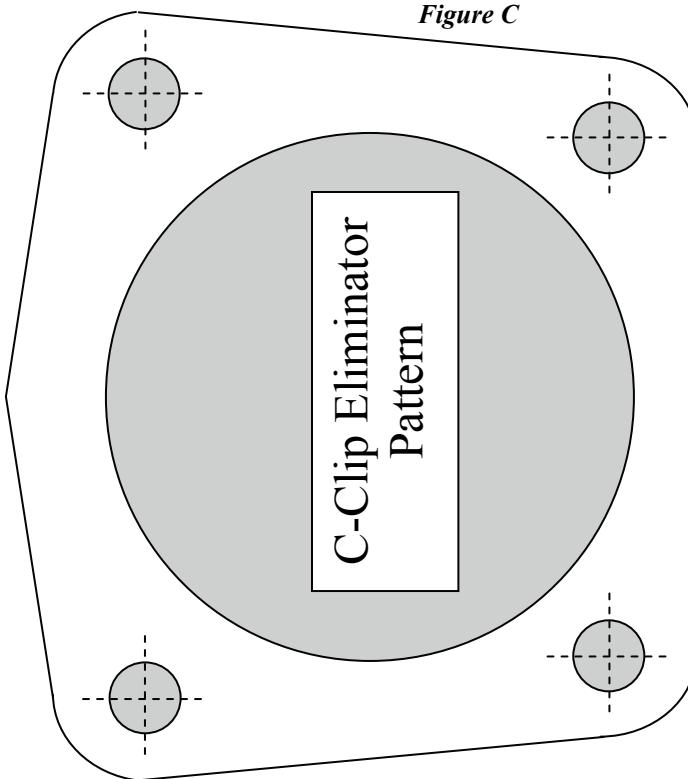


Figure D

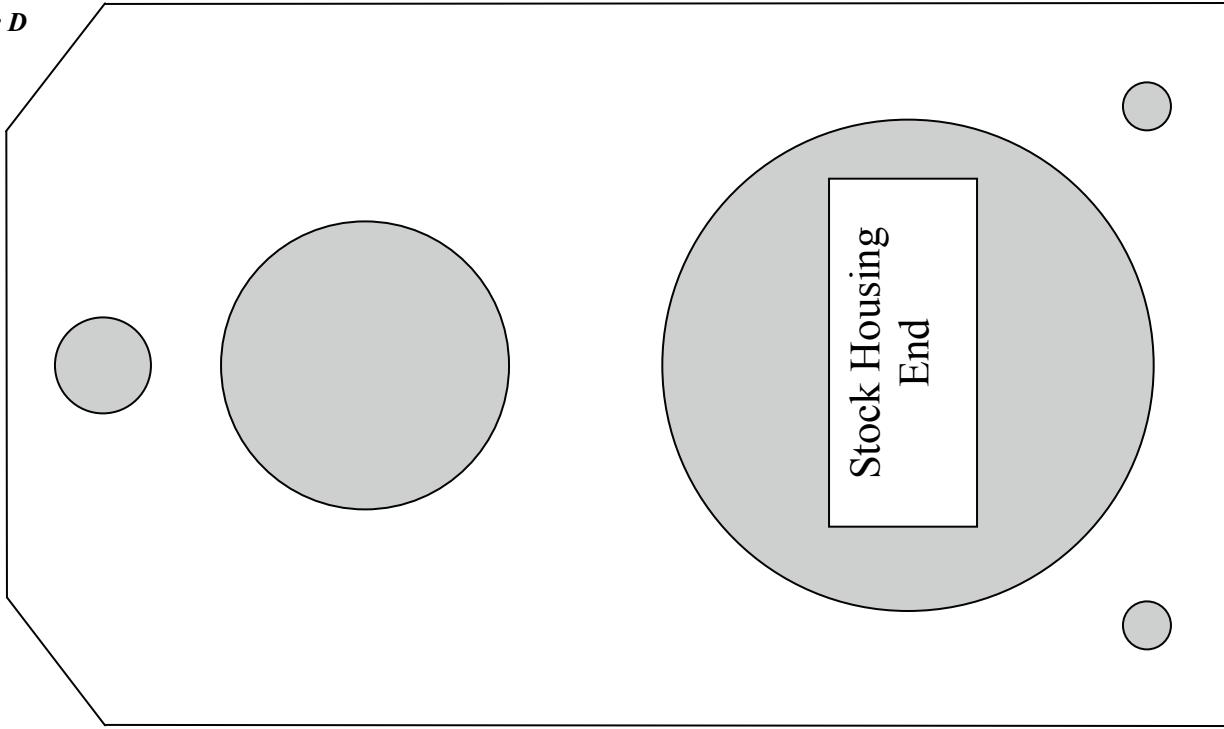

Moser Engineering Inc. disclaims warranty of any kind, including but not limited to an expressed or implied warranty of quality or fitness for any purpose. No warranty of any kind, expressed or implied, as to the quality or suitability of this product for any use, is hereby made by Moser Engineering. The buyer assumes all risk and liability resulting from the use of the goods. Seller neither assumes nor authorizes any person to assume for seller any other liability in connection with the sale or use of the goods sold, and there are no oral agreements or warranties collateral to or effecting the disclaimer or warranty. Included in said disclaimer is service of or remanufacturing performed by Moser Engineering on any product.